


Super Loud LED Alarm Clock

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Super Loud LED Alarm Clock is an ideal time-piece for your bedroom or any place where you need an easy-to-read clock with a full-featured alarm.

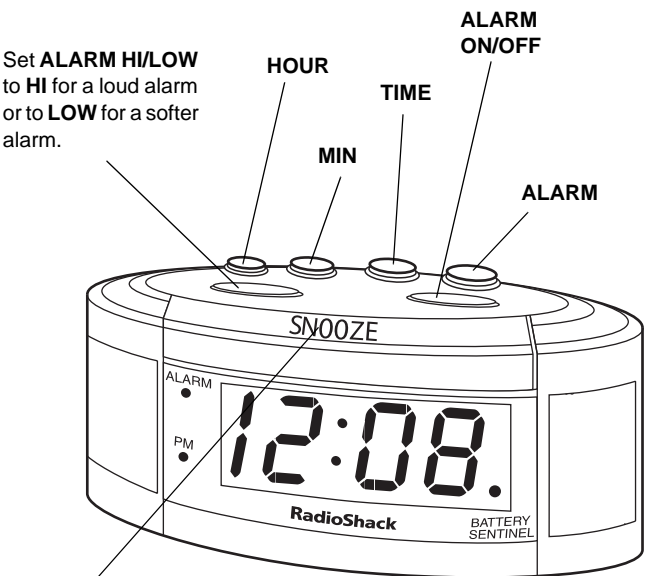

To temporarily turn off the alarm, press **SNOOZE** while the alarm sounds. The alarm turns off and sounds again in about 9 minutes. You can press **SNOOZE** as many times as you like.

Note: If the BATTERY SENTINEL Indicator lights when you press **SNOOZE**, the back up battery is getting low.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

CONNECTING POWER

To power the alarm clock, plug the clock's power cord into a standard AC outlet. The time flashes until you set it.

Installing a Backup Battery

For backup power, install a 9V battery (not supplied) in your clock. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Note: To prevent unnecessary drain on the battery, connect the alarm clock to an AC power outlet before you install the battery.

1. Press down on the battery compartment cover, slide it in the direction of the arrow, and lift it off.
2. Snap a 9V alkaline battery onto the battery terminals and place the battery in the compartment.
3. Replace the cover.

With a backup battery installed, the display turns off during a power failure, but the clock continues running for about 8 hours and the alarm sounds at the preset alarm time.

If the battery sentinel indicator lights, or the display flashes when power is restored after a power failure, replace the battery.

SETTING THE TIME

1. While holding down **TIME**, repeatedly press (or hold down) **HOUR** until the desired hour appears.

Note: The PM indicator appears if it is a PM hour.

2. Continue holding down **TIME** and repeatedly press (or hold down) **MIN** until the desired minute appears.
3. Release **TIME**.

SETTING THE ALARM

1. While holding down **ALARM**, repeatedly press (or hold down) **HOUR** until the desired hour appears.
2. Continue holding down **ALARM** and repeatedly press (or hold down) **MIN** until the desired minute appears.
3. Release **ALARM**. The current time reappears.
4. Press **ALARM** to view the set alarm time.

Note: You can press **ALARM**, **HOUR**, and **MIN** at the same time to set the alarm to 12:00 AM.

Using the Alarm

1. Slide **ALARM ON/OFF** to **ON**. The ALARM indicator lights. When the clock reaches the alarm time, the alarm sounds.

2. When the alarm sounds, slide **ALARM ON/OFF** to **OFF** to turn it off.
3. Slide **ALARM ON/OFF** to **ON** to reset the alarm.

Note: If you do not turn off the alarm, it sounds for about 2 hours, then automatically resets to sound at the same time the next day.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Requirement	AC 120V, 60 Hz, 5 Watts
Battery Sentinel	Standby 15µA
Battery Backup	One 9 Volt Battery
Dimensions (HWD)	2 ¹³ / ₁₆ × 5 ⁷ / ₈ × 3 ¹ / ₁₆ Inches (72 × 150 × 77 mm)
Weight	11 oz. (323 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99